


# EzFlex™ Combustible Gas Detector

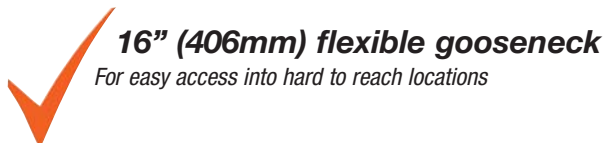

**16" (406mm) flexible gooseneck**  
For easy access into hard to reach locations

## Features:

- Quickly identifies and pinpoints gas leaks
- High Sensitivity
- One hand operation with thumb controlled sensitivity adjustment, to eliminate background gas levels
- Visible and audible alarm at 10% (LEL) Lower Explosive Limit for methane
- Locate the smallest leaks
- Complete with 3 "C" batteries

## Gas Detected:

- Natural Gas
- Methane
- Ethane
- Propane
- Butane
- Acetone
- Alcohol
- Ammonia
- Steam
- Carbon Monoxide (not to quantify)
- Gasoline
- Jet Fuel
- Hydrogen Sulfide
- Smoke
- Industrial Solvents
- Lacquer Thinner
- Naphtha



Specifications	Range
Pump driven field calibration range	10ppm
Sensor type	Solid State
Alarm	Visible and Audible @ 10% LEL for Methane
Warm-up	Approx. 1 minute
Response Time	< 2 seconds (up to 40% LEL)
Duty Cycle	Intermittent
Battery life	8 hours continuous use typical
Dimensions	8.7 x 2.83 x 1.8" (221 x 72 x 46mm)
Weight	18.4oz (520g)

## Ordering Information:

EZ40.....EzFlex™ Combustible Gas Detector

